



UPGRADE

4 LEG / 2 MOTOR
(with Remote Control)

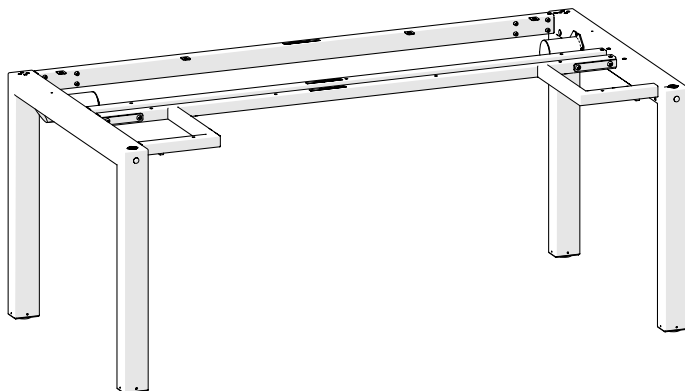


1. Packaging

 
1.1 Part Check List




Left Leg (1 Pcs)

 


Right Leg (1 Pcs)

 


Top Frame (1 Set)

 


Motor Cables (2 Pcs)

 

Power Cable (1 Pcs)

 

Smart Control Unit (1 Pcs)

 


Remote Control (1 Pcs)




M8x20 (4 Pcs)



 M8x12 (8 Pcs)



ST 4.8x16 (15 Pcs)

 

ST 4.2x16 (2 Pcs)



M6x10 (8 Pcs)



Parts displayed above may vary, based upon Frame Configuration


2. Assembly



Torque Guide


- M6 Screw's max torque = 6nm
- M8 Screw's max torque = 6nm
- M10 Screw's max torque = 6nm
- Tapping screws hand tightening only (**Do not use power tools!**)

2.1 Assembly Step by Step

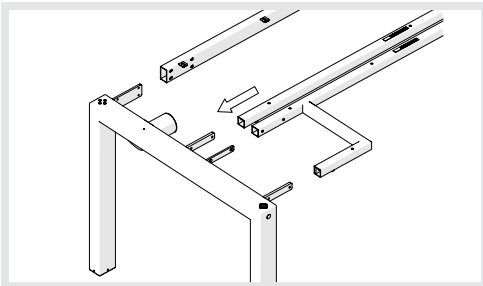


Step 1

Assemble the Top Frame & Leg as illustrated above.

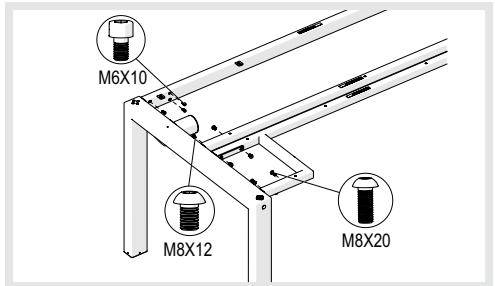


Step 2

Fix the Top Frame & Leg as illustrated above. Please refer to [Page 3 Torque Guide](#).

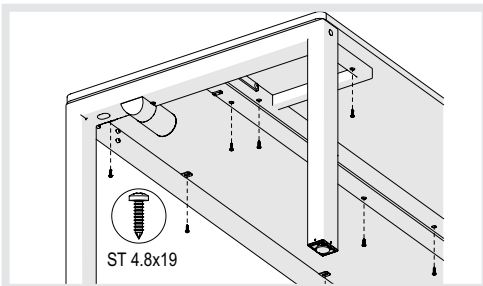

Step 3

Mount the Frame to the Table top and fix the Top Frame as illustrated above. Please refer to [Page 3 Torque Guide](#).

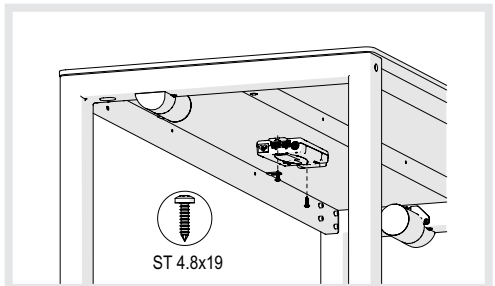


Step 4

Mount the Control Unit as illustrated above. Please refer to [Page 3 Torque Guide](#).


2. Assembly

2.2 Assembly Step by Step

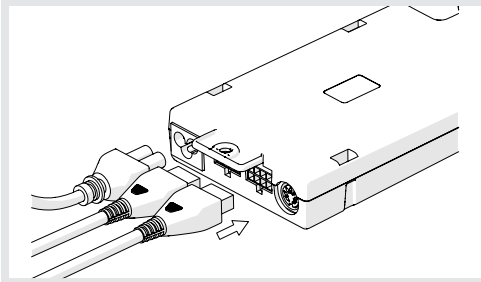


Step 5

Connect the Motor and Power Cables to the Control Unit as illustrated above.

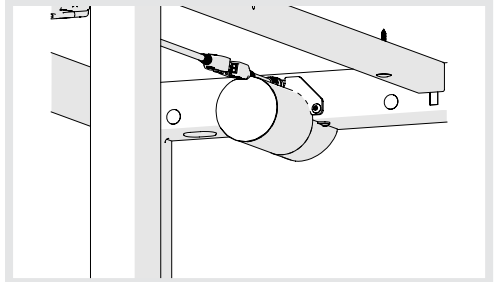


Step 6

Connect the Motor Cable to the Leg as illustrated above.

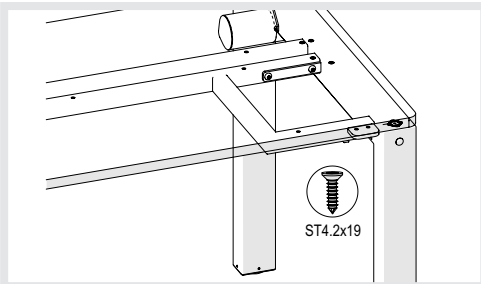

Step 7

Mount the Remote Control to the Table top as illustrated above. Please refer to **Page 3 Torque Guide**.

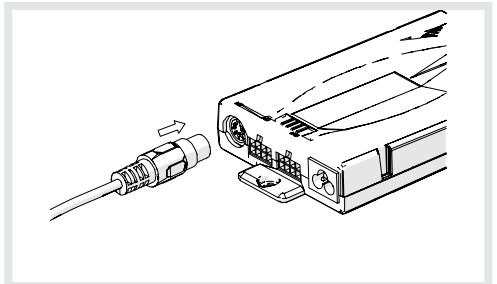

Step 8

Connect the Remote Control Cable to the Control Unit as illustrated above.

2.3 Zero Setting:

When you use the height adjustable frame for the first time or you wish to use a configured control unit on another identical electric height adjustable frame, you must reset the lowest desktop position to the minimum height .

- Press ▼ button and keep pressing it until the desktop has reached the lowest position (programmed desktop position).
- Press ▼ button again and keep pressing it. After about 5 seconds, the desktop will slowly move further down until it reaches the absolutely lowest desktop position possible.
- Release ▼ button. The electric height adjustable frame can now be used.